

SILKY



9072 White



9113 April Rose





9072-1544  
27cm DINNER PLATE  
D266mm/H22mm

9072-1525  
23cm BRUNCH PLATE  
D234mm/H25mm

9072-1526  
19cm SALAD PLATE  
D197mm/H22mm

9072-1527  
16cm B.B. PLATE  
D169mm/H19mm

9072-1788  
29cm SERVING PLATE  
D295mm/H12mm

9072-9430  
SERVER  
L260mm/S67mm



9072-1883  
23cm RIM SOUP PLATE  
D227mm/H35mm



9072-1528  
19cm COUPE SOUP BOWL  
D199mm/H38mm



9072-1529  
14cm FRUIT BOWL  
D149mm/H34mm



9072-59069 :  
9072-9331 / 9072-9332  
SALT & PEPPER SHAKER  
L49mm/S34mm/H88mm/120cc



9072-1658  
16cm CEREAL BOWL  
D159mm/H49mm



9072-2290  
TEA CUP LARGE  
L116mm/S91mm/H76mm  
290cc



9072-2306  
TEA CUP  
L115mm/S91mm/H71mm  
230cc



9072-2283  
COFFEE CUP  
L100mm/S78mm/H67mm  
190cc



9072-2289  
ESPRESSO CUP  
L88mm/S67mm/H57mm  
120cc



9072-2297  
BOUILLON CUP  
L142mm/S101mm/H56mm  
290cc



9072-4284  
SUGAR BOWL W/COVER  
L104mm/S81mm/H115mm/450cc



9072-4283  
CREAMER JUG 260cc  
L127mm/S68mm  
H96mm/260cc



9072-32241  
GRAVY BOAT  
L201mm/S91mm/H110mm/640cc  
9072-32244  
GRAVY BOAT TRAY  
L225mm/S160mm/H25mm



9072-3207  
22cm ROUND  
VEGETABLE BOWL  
D232mm/H78mm/1,950cc



9072-3223  
27cm OVAL  
VEGETABLE BOWL  
L263mm/S195mm/H56mm/1,200cc



9072-4285  
COFFEE POT W/COVER  
L236mm/S83mm/H223mm/1,390cc



9072-4344  
TEA POT W/COVER  
L254mm/S95mm/H177mm/1,450cc



9072-3222  
CASSEROLE W/COVER(M)  
L277mm/S177mm/H168mm/2,200cc



9072-3266  
CASSEROLE W/COVER(L)  
L287mm/S196mm/H200mm/3,350cc



9072-1593  
42cm OVAL PLATTER  
L428mm/S285mm/H40mm



9072-1531  
37cm OVAL PLATTER  
L376mm/S250mm/H30mm



9072-1532  
30cm OVAL PLATTER  
L299mm/S173mm/H25mm



9072-9333  
23cm BUTTER TRAY  
L240mm/S120mm/H20mm